 


Universal air conditioner remote control

Product Introduction

Q-988E type universal air conditioner remote control can remotely control most brands and models of air conditioners with digital automatic code searching function with low power consumption, complete function, far sending distance, easy setting, simple operation, original appearance, comfortable handle and convenient use, it applies big LCD display with clear settings, built-in clock and timing ON/OFF function also make operation more convenient.

Panel Description:

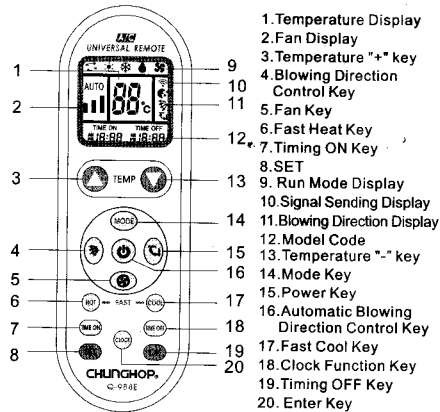

Fast Cool/Heat Key

- Press "Fast Cool" key to automatically set the machine as refrigerating mode, 21°C, middle wind, automatic blowing direction;
- Press "Fast Heat" key to automatically set the machine as heating mode, 27°C, middle wind, automatic blowing direction.

No need to set:

 
Once the battery is loaded, the remote control can control the mainstream brands on the market: Gree (YB0F2), Midea, Toshiba, Chunlan, Haier, Mitsubishi Heavy Industries 388, Hualing and other brands.

Restore factory settings

press the button "set" and "air volume" simultaneously for three seconds to restore the factory settings.
Note: when the battery is loaded, the combination code does not have timing function. To use the timing function, please control according to the setting method described in the instruction book, which is corresponding to the model.

Battery Installation:

1. Remove the battery cover of the remote control, install two new 7# batteries;
2. Install the battery cover. The time will appear in the left corner of LCD display.

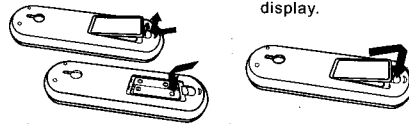

★ Since the remote control has the function of automatic memory after power failure, insure that the remote control can work normally after replacing batteries, the interval of replacing batteries should exceed 30 seconds.

 
 
Setting of Remote Control

Three methods (Method A/B/C) are provided to set this remote control, any one of which can be used in operation.

A. Digital automatic search type

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.
2. Hold on "SET" key (for about 3 seconds), release after the code flashes in the LCD, then press "Power" key (for about 6 seconds), release it after the code flashes again, the system will enter into automatic search state, and the code will increase "1" every two seconds, pay attention to the state of your air conditioner, keep searching till the air conditioner automatically turn on/off, press "Enter" key to finish setting.

Note: When turning on/off the air conditioner, the code displayed in the remote control is the corresponding code for the air conditioner.

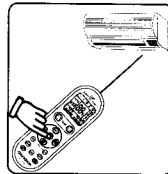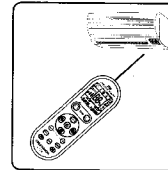


B. Manually input code

1. Manually plug-in the air conditioner, find the type of the air conditioner in the "Code Table", and find the first code, for example: Haier


| Brand | Code |
|-------|------|
| Haier | 1-19 |

 Code is flashing

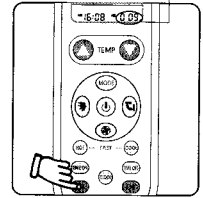


2. Hold on "SET" key (for about 3 seconds), release when the code flashes in the LCD, press temperature "▲" key till the desired code displays and flashes in the LCD.

 Code stops flashing

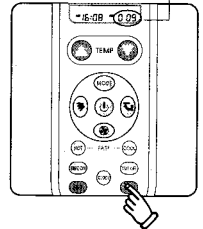

3. Press "Enter" key, the code will stop flashing,

 
4. Test if the keys on the remote control is effective, if yes, finish setting, if not, please repeat step 2-4.

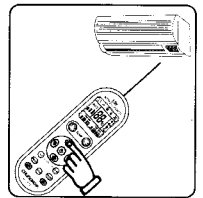

C. Manually search for code

1. Manually plug-in the air conditioner, aim the remote control at the receiving window of the air conditioner.

 2. Hold on "SET" key (for about 3 seconds), release after the code flashes in the LCD, then repeat to press temperature "▲", pay attention to the state of your air conditioner, keep searching till the air conditioner automatically turn on/off, press "Enter" key to finish setting.

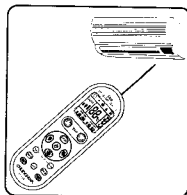

Set Time Function

Press "Clock" key to enter into clock setting state, clock flashes, adjust current time by pressing "Temperature +" or "Temperature -", press "Clock" key again to exit.

Timing ON/OFF Function

Timing ON Function

Press "Timing ON" key to increase one hour for starting the machine at setting time, it means to cancel Timing ON if it exceeds 24 hours. The time displayed for starting the machine means that the air conditioner automatically turns on at the setting time. The displayed ON time will count down, after setting, the remote control shall aim at the receiving window of the air conditioner.

Timing OFF Function

Press "Timing Off" key to increase one hour for turning off the machine at setting time, it means to cancel Timing OFF if it exceeds 24 hours. The time displayed for closing the machine means that the air conditioner automatically turns off at the setting time. The displayed OFF time will count down.

Note: Timing function applies HOUR system, which shall be 24 hours for max, the timing on and timing off time shall not be set at the same.

- This remote control is effective if the air conditioner receiver works normally.
- This remote control can not increase the functions of your air conditioner, if blowing direction function is not available for your air conditioner, then the blowing direction key of this remote control will be invalid.
- Do not use old and new batteries or batteries of different models at the same time.
- If this remote control is intended to be not in use for a long time, please remove the batteries.
- It may possibly caused internal program disorder if this remote control is not operated correctly, in case of that, please take out the battery, and install the batteries 35 minutes later, then the remote control may recover normal.

Warm tips



Applicable brand and code list

| Brand | Code | Brand | Code | Brand | Code | Brand | Code | Brand | Code |
|-----------------|-----------------------------|------------|-----------------|--------------------|---------|-------------------|---------------------|------------------|-------------------------------------|
| ACSOM | 980 | DAKE | 861 | HYUNDAI | 780-789 | PEREG | 998 | TADAIR | 501,508,509,532 |
| ADC | 861 | DAOTIAN | 821-824 | INYCIN | 475-483 | PIUSHANGXINHUABAO | 290 | | |
| AIDELONG | 293-295 | DELONGHI | 900 | JIANGNAN | 359 | PILOT | 902 | TADIRAN | 501,508,509,532,630,969,978,979,991 |
| AITE | 296-299 | DIY | 044,090,092,095 | JIALE | 358 | PUYI | 862 | | |
| AKIRA | 796-797 | DUNAN | 336 | JMSTAR | 360 | QIXING | 393 | TAIYA | 862 |
| AMCOR | 501,508,509,532,973,978,979 | DONGXIA | 334-335 | JINBEIJING | 361-362 | RAYBO | 371-383 | TCL | 120-133 |
| AMICO | 982 | DONGXINBAO | 260-268 | JINDA | 491-492 | RHOSS | 903 | TEAC | 850-859 |
| ALPIN | 989-991,998 | ELCO | 982 | JINSONG | 363-365 | RICAI | 394 | TECO | 831-834 |
| AUCMA | 210-229,933 | ELECTER | 981-986 | JOHNSO | 282 | RUIJIANG | 395-397 | TIANJINGKONGTIAO | 424 |
| AUX | 180-199 | ELECTROLUX | 471-474,250,308 | KANGLI | 368-370 | ROWA | 383-385 | TIANYUAN | 425-428 |
| AOKE | 301-302 | FEDDERS | 878 | KELONG | 110-119 | SAJJO | 848 | TOBO | 250-269 |
| AOLI | 300 | FEIEDRICH | 879 | KLIMATAIR | 797-800 | SAMSUNG | 610-629 | TONGLI | 429-430 |
| APTAN | 862 | FEIGE | 829-830 | KONKA | 366-367 | SANYO NEC | 500-550,860,943,946 | TOYO | 825-828 |
| BAIXUE | 299 | FEILU | 240-249 | KRIS | 804-805 | SANZUAN | 190 | TOSHIBA | 630-639 |
| BEIJINGJINGDIAN | 304 | FERROLIT | 901 | KT02_D001 | 283 | SAPORO | 861 | TRANE | 812-816 |
| BIG-THUMB | 311 | FIRST | 864 | KT02_D002 | 284 | SAST | 450-452 | UNI-AIR | 368-369 |
| BLUE STAR | 887 | FRESTECH | 270-279,944-945 | KTY001 | 285 | SENSOR | 860 | UTTLEDUCK | 454-456 |
| BOERKA | 630 | FUJITSU | 700-719 | KTY002 | 286 | SERENE | 499 | VIDEOCON | 884 |
| BOERKA | 305-306 | Funiki | 992 | KTY003 | 287 | SHAMEI | 400 | WANBAO | 431-433 |
| BOSHI | 310 | GALANZ | 134-149,936-940 | KTY004 | 288 | SHANGLING | 403-409 | WANGZI | 861 |
| BOSHIGAO | 308-309 | GEER | 342-343 | KTY005 | 289 | SHANYE | 862 | WEILI | 434-443,553-576 |
| BORLER | 307 | GLEE | 280 | LG | 600-609 | SHANXING | 401-402 | | |
| CAIXING | 311 | GOLDSTAR | 303 | LIANGYU | 780 | SHARP | 720-739 | WEITELI | 444 |
| CARRIER | 690-699,890-899 | GREE | 000,020-039 | LIKEAIR | 386-387 | SHENBAO | 410-411 | WHIRLPOOL | 770-774 |
| CHANGFENG | 190 | GUANGDA | 345-346 | LITTLESWAN | 453 | SHENGFENG | 412 | WUFENG | 445-446 |
| CHANGFU | 835-838 | GUOQIAO | 344 | LONGHE | 861 | SHENGFENGFELLU | 413 | XINGHE | 462-463 |
| CHANGLING | 312-323 | HAIER | 001-019 | LOREN-SEBO | 801-803 | SHINCO | 200-209 | XINLE | 457-460 |
| CHANGHONG | 059-079,934,947 | HELTON | 863 | MCQUAY | 790-795 | SHINING | 415 | XILENG | 448-449 |
| CHENGYUAN | 324 | HEMILTON | 095 | MIDEA | 040-058 | SHUANGLU | 416-418,948 | XINLING | 461 |
| CHIGO | 080-099 | HICON | 391-392 | MEILING | 388-391 | SIGMA | 447 | XIONGDI | 862 |
| CHUANGHUA | 325-328 | HISENSE | 230-239 | MINGXING,BOYIN | 290 | SOGO | 291 | YAIR | 467-471,044 |
| CHUANYAN | 861 | HITACHI | 640-659 | MITSUBISHI | 551-599 | SONGLINXIA | 862 | YAOMA | 470,977 |
| COLROLLA | 861 | HONGYI | 347 | MITSUKA | 904 | SONGXING | 419 | YIDONG | 499 |
| CHUNLAN | 170-179 | HUABAO | 100-109 | NATIONAL/Panasonic | 660-689 | SOVA | 292 | YORK | 775-779 |
| CONSUL | 993 | HUAGAO | 348 | NIKKO | 810-811 | SOVA | 420 | YUTU | 484-490 |
| CONROWA | 337-341 | HUAKE | 349-350 | NISO | 398-399 | SOWA | 862-863 | ZHONGYI | 493-494 |
| CORONA | 760-769 | HUAMEI | 351-352 | NORCA | 497 | SOYEA | 421-422 | ZUODAN | 495 |
| CROWN | 861 | HUANGHE | 353 | NORCA | 994 | SPEED | 987 | YUETU | 881-882,949 |
| DAEWOO | 332-333 | HUALING | 150-169,045 | OLYMPUS | 995-996 | SRTC | 423 | | 496,498,821- |
| DAIKIN | 740-759 | HUAWEI | 281 | OPAL | 997 | STARIGHT-AIRCON | 880 | OTHER | 828,839-849,865-877,905-976,999 |
| DAJINXING | 329-330 | HUIFENG | 354-356,357,360 | PANDA | 464-466 | SUNBURG | 817-820 | | |

* This company reserves the right to interpretation of the User's Manual. Design and technical parameters may vary without notice.